MANUEL D'UTILISATION
SÈCHE-CHEVEUX
SC0030/SC0030CS
DESCRIPTION
DU PRODUIT

1. Corps du sèche-cheveux
2. Capot du support mural
3. Couvercle transparent
4. Voyant lumineux
5. Interrupteur général
6. Prise pour rasoir
7. Interrupteur du sèche-chev
8. Bouton de contrôle de puissance



AVERTISSEMENTS

· Vérifier que la tension du sèche-cheveux est identique à celle de l'installation.
· Pour éviter tout risque d'électrocution : Ne jamais plonger le sèche-cheveux dans l'eau – ne pas l'utiliser dendant le bain ou la douche – ne pas utiliser le sèche-cheveux au-dessus ou près du lavaoo, de la baignoire ou de tout autre réciplent contenant de l'eau.
· Le sèche-cheveux ne doit pas entrer en contact avec de l'eau pendant son nettoyage.
· Ne jamais laisser l'appareil sur une surface ou un tissu moullié lorsqu'il est en marche.
· Quand le sèche-cheveux n'est pas utilisé, éteindre l'interrupteur général situé sur le support.
· Pour éviter d'abîmer la peau ou les cheveux, maintenir le sèche-cheveux à une certaine distance.
· Le sèche-cheveux est muni d'une protection contre les surchauffes qui déconnecte l'appareil quand, par exemple, l'entrée ou la sortie d'air se bloque. Dans ce cas, placer l'interrupteur général sur la position OFF et attendre environ 5 minutes avant de le rallumer.
· Si le sèche-cheveux dispose d'une prise, le débrancher lorsque : l'appareil ne fonctionne pas correctement, et également avant son nettoyage et après son utilisation.
· Ne pas tirer sur le câble électrique.
· Ne pas enrouler le câble électrique autour du sèche-cheveux.
· Ne pas allumer le sèche-cheveux si un câble on si le capot est endommagé.
Le sèche-cheveux doit uniquement être utilisé pour l'objectif pour lequel il a été conçu.

INSTRUCTIONS DE MONTAGE

· CET APPAREIL DOIT UNIQUEMENT ÊTRE MANIPULÉ PAR UN TECHNICIEN AUTORISÉ

VERSION AVEC PRISE

1. Le support du sèche-cheveux est fixé au mur par deux vis. Marquer sur le mur la position où sera placée la vis
2. Percer le mur en fonction des dimensions de la cheville et de la vis fournies.
3. Insérer la cheville et fixer le crochet en plastique blanc au mur, avec une des vis.
4. Insérer le support du sèche-cheveux sur le crochet. Le placer correctement, retirer le sèche-cheveux de son support et marquer sur le mur la position de la seconde vis.
5. Retirer le support et crocher le mur en fonction des dimensions de la cheville et de la vis fournies.
6. Insérer la cheville.
7. Déviisser les vis situées sur les parties avant et arrière du capot du support et les enlever.
8. Casser la pièce circulaire en plastique qui se trouve environ au centre de couvercle arrière du support.
9. Introduire les câbles à travers cet orifice et les relier au bloc de connexion (après avoir retiré ceux qui correspondent à la prise).
10. Fixer les câbles avec la pince.
11. Visser le capot au couvercle.
12. Mettre à nouveau en place le support sur le crochet en plastique et le visser.
13. Placer le sèche-cheveux sur le support.

INSTRUCTIONS D'UTILISATION

· Branchez le sèche-cheveux, connecter l'interrupteur général, sélectionnez la puissance souhaitée et appuyer sur l'interrupteur situé sur le manche.
· Les résultats obtenus sont meilleurs si, une fois les cheveux lavés, l'excès d'humidité est éliminé avec une serviette sèche.

INSTRUCTIONS DE NETTOYAGE

· Avant le nettoyage, débranchez ou déconnecter le sèche-cheveux.
· Nettoyer régulièrement l'entrée d'air avec une brosse.
· Nettoyer les parties en plastique avec un chiffon légèrement humidifié, puis les sécher avec un autre chiffon.

CONTENU

· Un sèche-cheveux
· Un support mural
· Un crochet blanc
· Deux chevilles en nylon
· Deux vis
· Un manuel d'utilisation

INFORMATIONS TECHNIQUES

· Tension : 220 ~240V 50/60Hz
· Puissance : 1200W max-540W min

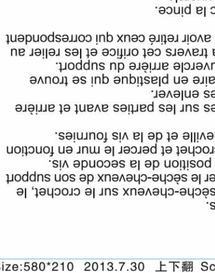

ISTRUZIONI PER L'USO
ASCIUGACAPELLI
SC0030/SC0030CS
DESCRIZIONE
DEL PRODOTTO

· IL PRESENTE DISPOSITIVO PUÒ ESSERE MANEGGIATO ESCLUSIVAMENTE DA PERSONALE TECNICO AUTORIZZATO

ISTRUZIONI DI MONTAGGIO

· Utilizzare l'asciugacapelli esclusivamente per lo scopo per cui è stato concepito.
· Non accendere l'asciugacapelli se qualche cavo o la struttura rotanto danni.
· Non avvolgere il cavo elettrico intorno all'asciugacapelli.
· Non tirare il cavo elettrico.
· Non avvicinare il cavo elettrico alle dannì.
· Per evitare di danneggiare la pelle o i capelli, mantenere l'asciugacapelli a una certa distanza.
· Quando non si utilizza l'asciugacapelli, spegnere l'interruttore generale presente sul supporto.
· Non appoggiare il dispositivo in funzionamento su una superficie o tela bagnata.
· Non utilizzare il dispositivo in funzionamento su una superficie o tela bagnata.
· Durante le operazioni di pulizia l'asciugacapelli non può entrare in contatto con l'acqua.
· Durante le operazioni di pulizia l'asciugacapelli non può recipiente contenente acqua.
· Controllare che la tensione dell'asciugacapelli coincida con quella della rete elettrica.
· Per evitare rischi di elettrocuzione: Non immergere mai l'asciugacapelli in acqua, non utilizzarlo mentre si fa un bagno o una doccia, non usarlo sopra o in prossimità di un lavandino, di una vasca da bagno o di qualsiasi altro

OFF e attendere 5 minuti circa prima di riaccenderlo.
· Se l'asciugacapelli dispone di una presa, questa va scollegata nei seguenti casi: il dispositivo non funziona correttamente, prima di pulirlo e dopo averlo utilizzato.

AVVERTENZE

1. Interruttore dell'asciugacapelli
2. Pulsante di regolazione della potenza

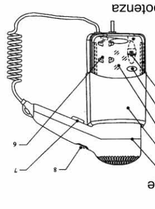

3. Copercchio trasparente
4. Spia luminosa
5. Interruttore generale
6. Presa per rasoio

INSTRUCTIONS DE MONTAGE

· THIS APPLIANCE MUST BE EXCLUSIVELY HANDLED BY AN AUTHORIZED TECHNICIAN

PLUG VERSION

1. There are two male screws to mount the support on the wall. Mark on the wall the position where you will place the lower male screw.
2. Drill one hole according to the dimension of the plugs and male screws supplied.
3. Introduce the plug and screw the plastic white hook.
4. Insert the dryer support on the hook and set it properly, remove the hair dryer from its support and mark on the wall the position of the second screw.
5. Remove the support and drill the wall according to the dimension of the plugs and male screws supplied.
6. Introuce the plug. Hang the support on the hook and screw it.
7. Put the hair dryer on its support.

MAINS VERSION

1. There are two male screws to mount the support on the wall. Mark on the wall the position where you will place the lower male screw (**notice where are the electric cables that you are going to plug-in**).
2. Drill one hole according to the dimension of the plugs and male screws supplied.
3. Introuce the plug and screw the plastic white hook.
4. Insert the dryer support on the hook and set it properly, remove the hair dryer from its support and mark on the wall the position of the second screw.
5. Remove the support and drill the wall according to the dimension of the plugs and male screws supplied.
6. Introduce the plug.
7. Loosen the screws from the front cover and the back cover cover and remove it.
8. Break the round plastic piece placed, aproximately, in the middle of the back cover.
9. Introduce the electric cords through this hole and connect them to the lead (removing first the plug's ones).
10. Fasten the cables with the clip.
11. Fix the front cover with the screws.
12. Hang the support on the hook and screw it.
13. Put the hair dryer on its support

HOW TO USE THE HAIR DYER

· Plug the appliance, switch on the main breaker, select the airflow power and push the hair dryer power switch situated on their handle.
· The result obtained would be better if after washing your hair you use a dry towel in order to elimate the excess of humidity.

HOW TO CLEAN THE HAIR DYER

· Before cleaning unplug or disconnect the appliance.
· Clean regularly the air intake grid with a brush.
· Clean the plastic parts with an slightly damp cloth and dry it with another one.

CONTENT

· One hair dryer
· One wall support
· One white hook
· Two nylon plugs
· Two male screws
· One user's manual

TECHNICAL INFORMATION

· Voltaje: 220 ~240V 50/60Hz
· Power: 1200W max / 540W min

USER'S MANUAL
HAIR DRYER
SC0030/SC0030CS
PRODUCT'S DESCRIPTION

1. Hair dryer body
2. Wall support
3. Transparent cover
4. Pilot lamp
5. Main breaker
6. Shaver's socket
7. Hair dryer power switch
8. Airflow control switch

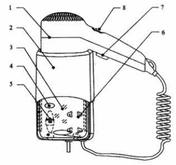

CAUTIONS

· Check if the hair dryer and the power supply have the same voltage.
· In order to avoid shock hazard. Never immerse the appliance into the water- do not use the air dryer while having a bath or a shower – do not use the hair dryer over or near a basin, a bathtub or other receptacles containing water.
· The dryer must not get into contact with water during cleaning.
· Never leave the appliance on a wet surface or cloth when it is working.
· Switch off the main breaker, situated on the support, if you are not using the dryer.
· To avoid that your hair or skin could be damaged, do not hold the dryer too close.
· Do not cover the air intake or the air outlet during its use.
· The hair dryer is fitted with an overload protection that switchess off the appliance when e.g. the air outlet or the the air intake are blocked. When it occurs, reset the main breaker to OFF position and wait for apporximately 5 minutes. Then, switch on again.
· When the dryer has a plug, remove it when: the appliance does not function properly, before its cleaning, after using it.
· Do not pull the electric cord.
· Do not wrap the electric cord around the appliance.
· Do not switch on the dryer when some lead or the dryer shows signs of damage.
· The hair dryer should not be used for any other purpose than therein described.

MOUNTING INSTRUCTIONS

· THIS APPLIANCE MUST BE EXCLUSIVELY HANDLED BY AN AUTHORIZED TECHNICIAN

PLUG VERSION

1. There are two male screws to mount the support on the wall. Mark on the wall the position where you will place the lower male screw.
2. Drill one hole according to the dimension of the plugs and male screws supplied.
3. Introduce the plug and screw the plastic white hook.
4. Insert the dryer support on the hook and set it properly, remove the hair dryer from its support and mark on the wall the position of the second screw.
5. Remove the support and drill the wall according to the dimension of the plugs and male screws supplied.
6. Introuce the plug. Hang the support on the hook and screw it.
7. Put the hair dryer on its support.

MAINS VERSION

1. There are two male screws to mount the support on the wall. Mark on the wall the position where you will place the lower male screw (**notice where are the electric cables that you are going to plug-in**).
2. Drill one hole according to the dimension of the plugs and male screws supplied.
3. Introuce the plug and screw the plastic white hook.
4. Insert the dryer support on the hook and set it properly, remove the hair dryer from its support and mark on the wall the position of the second screw.
5. Remove the support and drill the wall according to the dimension of the plugs and male screws supplied.
6. Introduce the plug.
7. Loosen the screws from the front cover and the back cover cover and remove it.
8. Break the round plastic piece placed, aproximately, in the middle of the back cover.
9. Introduce the electric cords through this hole and connect them to the lead (removing first the plug's ones).
10. Fasten the cables with the clip.
11. Fix the front cover with the screws.
12. Hang the support on the hook and screw it.
13. Put the hair dryer on its support

HOW TO USE THE HAIR DYER

· Plug the appliance, switch on the main breaker, select the airflow power and push the hair dryer power switch situated on their handle.
· The result obtained would be better if after washing your hair you use a dry towel in order to elimate the excess of humidity.

HOW TO CLEAN THE HAIR DRYER

· Before cleaning unplug or disconnect the appliance.
· Clean regularly the air intake grid with a brush.
· Clean the plastic parts with an slightly damp cloth and dry it with another one.

CONTENT

· One hair dryer
· One wall support
· One white hook
· Two nylon plugs
· Two male screws
· One user's manual

TECHNICAL INFORMATION

· Voltaje: 220 ~240V 50/60Hz
· Power: 1200W max / 540W min

Size:580*210 2013.7.30 上下翻 Sc0030 四种说明书 慧普 CTP 阳光